

Tie Rod **10351**


Socket **10352**

10353

Operating Instructions

- 1) Using the Tiger Tie Rod End Remover, separate the Tie Rod from the spindle, drag link, etc.
- 2) Choose correct Tie Rod Socket according to size of Tie Rod.
- 3) Install Tie Rod Socket onto end of impact or hand wrench.
- 4) Establish thread direction needed for removal.
- 5) Begin to supply power to Tie Rod Socket. The tie rod end should now spin off the rod.

If for any reason the tie rod end does not move easily off the rod, stop supplying power to the tool and apply a penetrating lubricant to the threads of the part to be removed. Wait a few minutes and try the tool again.

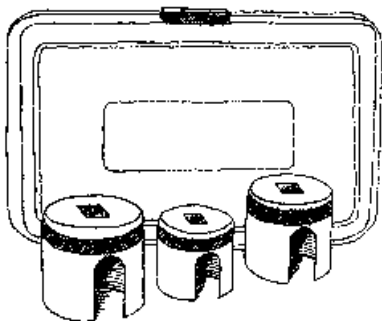

TIGER TOOL

International Incorporated

446 Harison St, P.O. Box 1420, Sumas, WA, 98295, U.S.A.
548 Sumas Way, Abbotsford, BC, V2S 8C4, Canada

Phone: 1-800-661-4661