

10388 – Intermediate Pitman Arm Puller



OPERATING INSTRUCTIONS

1. Remove the retaining nut and washer from the sector arm.
2. Back forcing screw out on the 10388 tool, and slip casting over the pitman arm until the forcing screw lines up with the center of the sector shaft.
3. Once the tool is properly positioned on the pitman arm, apply 1/2" drive impact to the forcing screw until the pitman arm is removed from the sector shaft.

NOTE:

ALWAYS KEEP THE FORCING SCREW THREADS CLEAN AND WELL LUBRICATED WITH OIL. FAILURE TO DO SO CAN RESULT IN THE THREADS SEIZING IN THE TOOL.

**** CAUTION ****

Stay Alert! Watch what you are doing and use common sense when operating this tool. Do not operate tool while under the influence of drugs, alcohol, or medication. Always use safety equipment to prevent injuries. Approved face and eye protection must always be worn by the operator, as well as others in the work area. Keep your work area clean and well lit.

TIGER TOOL
International Incorporated®
1-800-661-4661